



# deepalert

ALWAYS LOOKING OUT FOR YOU

## Provision - Setting up cameras & accessing camera sub streams

The following article describes how to connect the DeepAlert Hub to a Provision camera sub stream.

The connection string for a typical Provision camera is as follows (connect to sub-stream):

```
rtsp://admin:secret@192.168.1.150:554/chID=8&streamType=sub&linkType=tcp
```

## Step-by-step guide

**Log in to the local DeepAlert Hub console either from:**

- The DeepAlert Wireless access point or
- From the DeepAlert operator console

E.g. - `http://<IP Address>`

**Select "Configure Cameras" and complete the following details:**

- Set the "IP Address" of the camera e.g. 192.168.1.111
- Set the "Human Name" e.g. Megacorp - Main Entrance
- Set the "Stream Route" e.g. /chID=8&streamType=sub&linkType=tcp
- Set the "RSTP Port" e.g. 554
- Set the "RSTP Login" e.g. admin
- Set the "RSTP Password: Please ensure the password consists only of upper or lowercase numbers and numbers (avoid non-alphanumeric characters such as "@")

**Click "Add/Update Camera"**

Camera A    Add New Camera

---

Configured as DH1KIPPIE-a

**Camera Enabled**  
*Configuration will be saved, but camera will only be active if this box is checked.*

**IP Address**    *e.g. 10.0.0.101*

192.168.1.111

**Human Name**

Megacorp - Main Entrance

**Stream Route**    *e.g. /streaming/channels/102*

/streaming/channels/102

**RTSP Port**    *e.g. 554*

554

**RTSP Login**

admin

**RTSP Password**

\*\*\*\*\*|

**Advanced Settings**

**Remove Camera Configuration**  
*Check box and click Add/Update to delete configuration for this camera*

Add/Update Camera

**Select "System Status" click "Restart DeepAlert Service"**